



Wall mount holder

Remove cover from base by prying with flat head screwdriver.

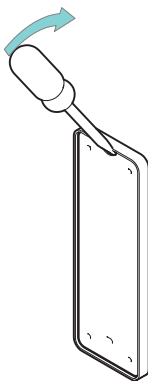

Use supplied fasteners and anchors to attach the base to wall.

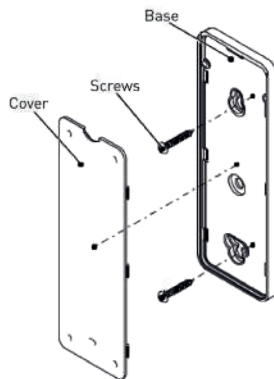

Replace cover by pressing snap latches into place


Remote battery

Remove cover from remote press gently in and down to disengage cover.




Slide to remove


Install battery with positive (+) side facing up.

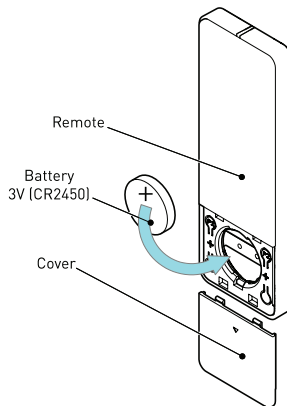

Buttons

 

UP
STOP
DOWN
CHANNEL

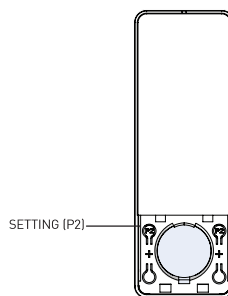


PROGRAMMING

Protocol selection


This device can be configured to operate "EL" motors. (The default mode is "ES" protocol).
To toggle between ES & EL modes follow the following steps.

HOLD **P2** while inserting battery

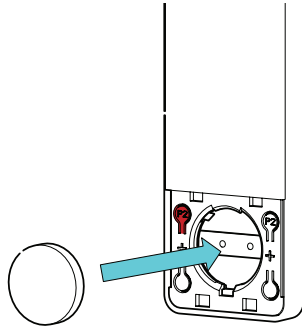

For 15 CH

For 1 CH

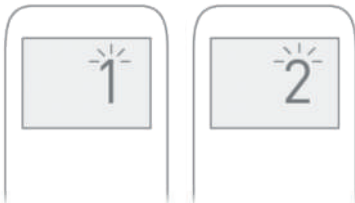

Screen flashes X 5

Screen flashes "1" = ES Mode
Screen flashes "2" = EL Mode

1 Flash = ES Mode
2 Flashes = EL Mode

Hide unused channels

Your multi channel remote can be configured to have anywhere between 1 or 15 visible channels. Inactive channels will not be visible when scrolling through the CH selection.

Hold **CHANNEL UP** and **CHANNEL DOWN** until "15" flashes



Select the highest Channel desired using the **UP** or **DOWN** buttons



Press **STOP** to confirm



Response
Flashing stops

Disable limit setting function of remote



IMPORTANT

This mode is intended to be used after all shade programming is completed.

User Mode will prevent accidental or unintended changing of limits.

15 CH

1 CH

Hold **STOP** for 20 seconds.



Response

LCD displays "L" when locked

LCD displays "U" when unlocked



Response

LED solid on when locked

LED blinking when unlocked




It is still possible to add or delete channels and perform **P2** functions, while the lock function is enabled.

ADDING OR REMOVING CONTROLLERS & CREATING GROUP CHANNELS

Using Motor P1 Button

Hold **P1** button on motor head.

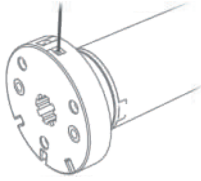

Hold **STOP** on controller to add or remove.




Using a pre-existing Controller


A= Existing controller or channel (to keep)

B= Controller or channel to add or remove

Press **P2** on existing controller.

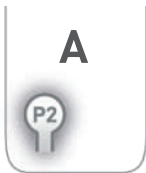


Press **P2** on existing controller.

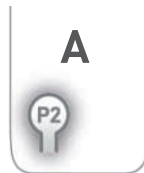

Press **P2** on new controller.



 Selecting a channel - (multi channel remote)



Press **LEFT** or **RIGHT** on controller to select desired channel

Group control using CH "0"

Channel "0" is pre-set to controll ALL shades paired within your multi-channel remote

